
Unable to create DVD with a DVD writer.

The USB cable is not connected correctly.