

 
ON-SCREEN DISPLAY

Sets whether to show on-screen displays such as icons during playback.


Setting	Details
OFF	No display at all.
DISPLAY ALL	Displays everything.
DISPLAY DATE ONLY	Displays the date only.


Displaying the Item


1 Select the playback mode.

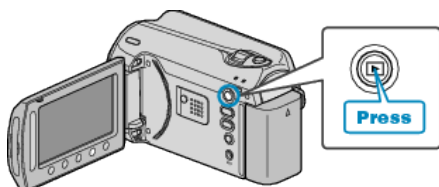

2 Select still image mode.

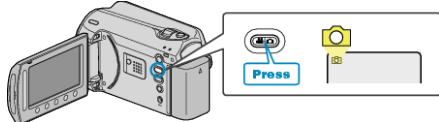 

3 Touch  to display the menu.

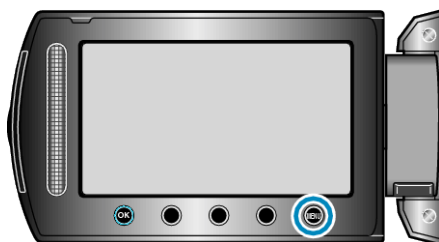 

4 Select "ON-SCREEN DISPLAY" and touch .

