

Recording cannot be performed.

Check the /  switch.

Set to the recording mode with the  (Play) Button.