Deleting Playlists

Delete the playlists that you have created.

1 Select the playback mode.



2 Select video mode.



3 Touch en to display the menu.



4 Select "EDIT PLAYLIST" and touch @s.



5 Select "DELETE" and touch @s.



6 Select the playlist you want to delete and touch 68.



- $\bullet\,$ All created playlists will be deleted when "DELETE ALL" is selected.
- 7 Select "YES" and touch ®.



- After deleting is complete, the screen returns to the delete playlist selection screen.
- After deleting, touch .