

REC MEDIA FOR VIDEO

Sets the recording/playback media of videos.

Setting	Details
HDD	Records videos to the camcorder's built-in HDD.
SD	Records videos to the microSD card.

Displaying the Item

1 Touch  to display the menu.



2 Select "MEDIA SETTINGS" and touch .



3 Select "REC MEDIA FOR VIDEO", and touch .

