


Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.


1 Touch **MENU** to display the menu.

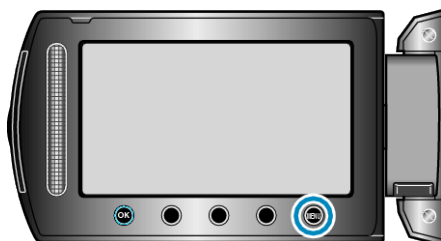

2 Select "MANUAL SETTING" and touch **OK**.



3 Select "SCENE SELECT" and touch **OK**.

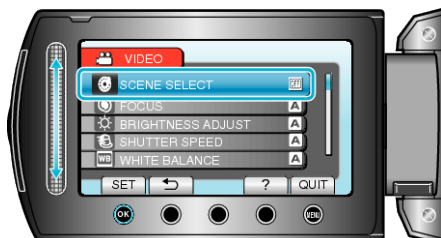

4 Select the scene and touch **OK**.



• After setting, touch **MENU**.

*The image is only an impression.

Setting	Effect
NIGHT EYE	Increases gain and brightens the scene automatically when the surrounding is dark. To prevent camera shake, use a tripod. OFF ON
NIGHT	Captures night scenes naturally. OFF ON
PORTRAIT	Blurs the background to bring out the people in the picture. OFF ON
SPORTS	Captures fast-moving subjects clearly in every single frame. OFF ON
SNOW	Prevents the subject from appearing too dark when recording snow scenes on a sunny day. OFF ON
SPOT-LIGHT	Prevents the human subject from appearing too bright under light. OFF ON