

## REC MEDIA FOR IMAGE

Sets the recording/playback media of still images.

| Setting | Details   |
|---------|---|
| HDD     | Records still images to the camcorder's built-in HDD. |
| SD      | Records still images to the microSD card.             |

### Displaying the Item

1 Touch  to display the menu.



2 Select "MEDIA SETTINGS" and touch .



3 Select "REC MEDIA FOR IMAGE" and touch .

