


DELETE DATA ON HDD

Execute this process when disposing of this unit or passing it to another person.

1 Touch **OK** to display the menu.



2 Select "MEDIA SETTINGS" and touch **OK**.

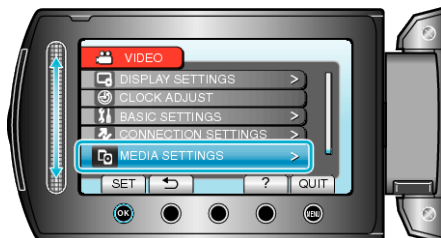

3 Select "DELETE DATA ON HDD" and touch **OK**.



4 Select "YES" and touch **OK**.



- After deleting the data, touch **OK**.

CAUTION:

- Connect the AC adapter as it may take some time to delete data.

NOTE:

- Repeat the process to make data restoration even more difficult.