




## Reducing Camera Shake

When DIS is turned on, camera shake during recording can be effectively reduced.



- The setting of DIS switches with every touch.

| Display   | Setting  |
|---|--|
|  (Image stabilizer 1) | Activates image stabilizer.  |
|  (Image stabilizer 2) | Reduces camera shake more effectively when shooting bright scenes on the wide angle end.<br>*Only on the wide angle end (approx. 5x) |
|  (OFF)                | Deactivates image stabilizer.  |

### NOTE:

- It is recommended to switch off this mode when using a tripod and recording a subject with little movement.
- Complete stabilization may not be possible if camera shake is excessive.
- This setting is effective for video recording only.