
INSERT DISC/CHANGE DISC

Open the tray of the DVD writer, check and reset the DVD, then close the tray.
Replace the disc in the DVD writer.