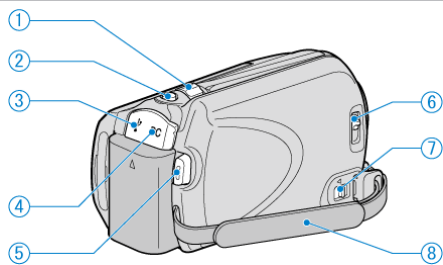


## Rear

**1** Zoom/Volume Lever

- During shooting: Adjusts the shooting range.
- During playback (index screen): Changes the number of images to display.
- During video playback: Adjusts the volume.

**2** SNAPSHOT (Still image recording) Button

- Takes a still image.

**3** USB Terminal

- Connects to PC using a USB cable.

**4** DC Terminal

- Connects to an AC adapter to charge the battery.

**5** START/STOP (Video recording) Button

- Starts/stops video recording.

**6** Lens Cover Switch

- Opens and closes the lens cover.

**7** Grip Belt Release Lever

- Allows the grip belt to be removed and used as a hand strap.

**8** Grip Belt

- Pass your hand through the grip belt to hold this unit firmly.