


Adjusting Focus Manually

Set this when the focus is not clear in “AUTO” or when manual focusing is desired.


1 Touch  to display the menu.

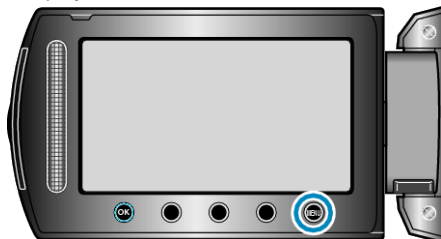

2 Select “MANUAL SETTING” and touch .



3 Select “FOCUS” and touch .

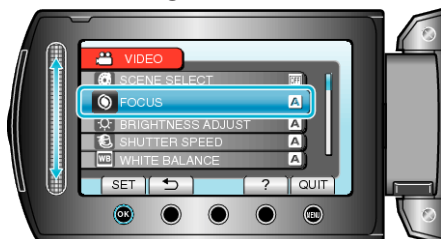

4 Select “MANUAL” and touch .



5 Adjust the focus with the slider.



- Slide upward to focus on a distant subject.
- Slide downward to focus on a near subject.

6 Touch  to confirm.



NOTE:

- A subject that is focused at the telephoto (T) end remains in focus when it is zoomed out to the wide angle (W) end.