



Changing the Event of the Currently Displayed File

Checks and changes the event of the currently displayed file.

1 Select the playback mode.

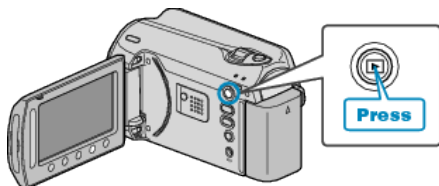

2 Select video mode.

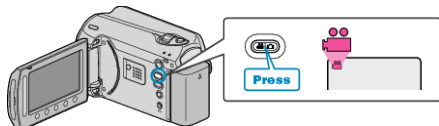

3 Touch to display the menu.



4 Select "EDIT" and touch .



5 Select "CHANGE EVENT REG." and touch .



6 Select "CURRENT" and touch .



7 Select "YES" and touch .



- Touch the operation buttons "" / "" to select the previous or next file.

8 Select a new event and touch .



- You can cancel the registered event by touching "CANCEL".
- After setting, touch .
- To exit the screen, touch .