

DROP DETECTION

Prevents damage to the HDD when this unit is dropped.


Setting	Details
OFF	Deactivates the function.
ON	Stops recordings and playbacks when this unit is dropped to prevent damage to the HDD.

NOTE:

- The HDD may not be protected even when “ON” is selected.

Displaying the Item

- 1 Touch  to display the menu.

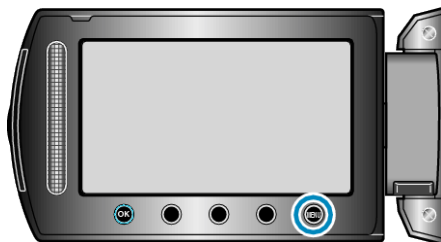

- 2 Select “BASIC SETTINGS” and touch .



- 3 Select “DROP DETECTION” and touch .

