

HDD ERROR !

Turn off this unit, and turn it on again.

If the above does not solve the problem, back up your files and execute "FORMAT HDD" in the media settings menu. (All data will be deleted.)