

## Optional Accessories

You can record for a longer time by using the optional battery pack.

Product Name	Description
Battery Pack <ul style="list-style-type: none"> <li>• BN-VG107E</li> <li>• BN-VG114E</li> <li>• BN-VG121E</li> </ul>	<ul style="list-style-type: none"> <li>• Provides a longer recording time than the battery pack that comes with this unit. It can also be used as a spare battery pack.</li> </ul>
Battery Charger <ul style="list-style-type: none"> <li>• AA-VG1</li> </ul>	<ul style="list-style-type: none"> <li>• Enables the battery pack to be charged without using this unit.</li> </ul>
DVD Writer <ul style="list-style-type: none"> <li>• CU-VD3</li> </ul>	<ul style="list-style-type: none"> <li>• Enables the images recorded on this unit to be copied to a DVD without using a PC.</li> </ul>
DVD Writer <ul style="list-style-type: none"> <li>• CU-VD50</li> </ul>	<ul style="list-style-type: none"> <li>• Creates DVDs and functions as an external DVD drive when connected to a PC. In addition, created DVDs can be played back by connecting the CU-VD50 to a TV.</li> </ul>

### NOTE:

- For more information, refer to the catalog.
- BN-VG107E is the same battery pack that comes with this unit.

## Approximate Recording Time (Using Battery)

Battery Pack	Actual Recording Time	Continuous Recording Time
<b>BN-VG107E (Supplied)</b>	40 m	1 h 10 m
<b>BN-VG114E</b>	1 h 25 m	2 h 30 m
<b>BN-VG121E</b>	2 h 5 m	3 h 50 m

- The above are values when "LIGHT" is set to "OFF" and "LCD BACK-LIGHT" is set to "STANDARD".
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.  
(It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.  
(Replace the battery pack with a new one.)