

FORMAT HDD

Deletes all files on the HDD.


| Setting | Details |
|------------------------------|---|
| FILE | Deletes all files on the HDD. |
| FILE + MANAGE- MENT NO | Deletes all files on the HDD and resets the folder and file numbers to "1". |

CAUTION:

- All data on the HDD will be deleted when it is formatted. Copy all files on the HDD to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.

Displaying the Item

1 Touch  to display the menu.

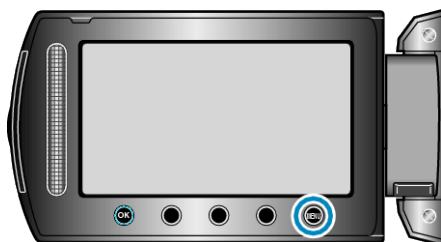

2 Select "MEDIA SETTINGS" and touch .



3 Select "FORMAT HDD" and touch .

