

---

### **INSERT DISC/CHANGE DISC**

Open the tray of the DVD writer, check and reset the DVD, then close the tray.  
Replace the disc in the DVD writer.