


Setting Shutter Speed

You can set the shutter speed to suit the type of subject.

1 Touch **OK** to display the menu.

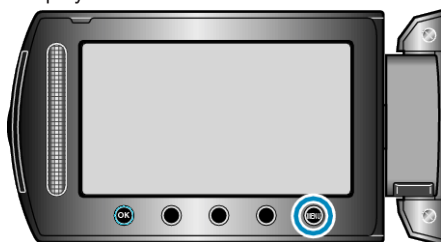

2 Select "MANUAL SETTING" and touch **OK**.



3 Select "SHUTTER SPEED" and touch **OK**.



4 Select "MANUAL" and touch **OK**.



5 Select the shutter speed with the slider.



Sets the shutter speed from 1/2 to 1/4000.
(Up to 1/1000 for still image.)

- Slide upward to increase the shutter speed.
- Slide downward to decrease the shutter speed.

6 Touch **OK** to confirm.



NOTE:

- Settings can be adjusted separately for videos and still images.