


**WIND CUT**


Reduces the noise caused by wind.


Setting	Details
OFF	Deactivates the function.
ON	Activates the function.

**Displaying the Item**

1 Select video mode.

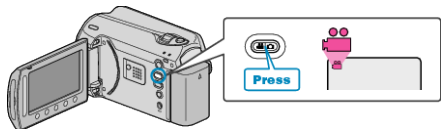

2 Touch  to display the menu.

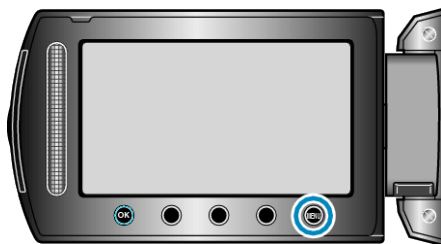

3 Select "WIND CUT" and touch .



