

شحن وحدة البطارية في الخارج

يختلف شكل مخرج الطاقة باختلاف الدول والمناطق.
لشحن وحدة البطارية، أنت بحاجة إلى قابس تحويل يتفق مع شكل المخرج.

A	B	BF	C	O
				
				

North America		Europe		Oceania		Tyuukintou	
United States	A	Iceland	C	Australia	O	Israel	C
Canada	A	Ireland	C	Guam	A	Iran	C
Mexico	A	United Kingdom	B,BF	Tahiti	C	Kuwait	B,C
Asia		Italy	C	Tonga	O	Jordan	B,BF
India	B,C,BF	Austria	C	New Zealand	O	Africa	
Indonesia	C	Netherlands	C	Fiji	O	Algeria	A,B,BF,C
Singapore	B,BF	Canary Islands	C	Latin		Egypt	B,BF,C
Sri Lanka	B,C,BF	Greece	C	Argentina	BF,C,O	Guinea	C
Thailand	A,BF,C	Switzerland	C	Colombia	A	Kenya	B,C
South Korea	A,C	Sweden	C	Jamaica	A	Zambia	B,BF
China	A,B,BF,C,O	Spain	A,C	Chile	B,C	Tanzania	B,BF
Nepal	C	Denmark	C	Haiti	A	Republic of South Africa	B,C,BF
Pakistan	B,C	Germany	C	Paraguay	A	Mozambique	C
Bangladesh	C	Norway	C	Bahamas	A	Morocco	C
Philippines	A,BF,O	Hungary	C	Puerto Rico	A		
Vietnam	A,C	Finland	C	Brazil	A,C		
Hong Kong Special	B,BF	France	C	Venezuela	A		
Administrative Region		Belgium	C	Peru	A,C		
Macao Special	B,C	Poland	B,C				
Administrative Region		Portugal	B,C				
		Romania	C				
Malaysia	B,BF,C						