

---

## Deleting Unwanted Files

Delete unwanted videos and still images when the space in the recording media is running out.

The capacity of the recording media can be restored after deleting the files.

**NOTE:**

- Deleted files cannot be restored.
- When files in a playlist are deleted, the playlist changes.
- Files that are protected cannot be deleted.  
Release protection before deleting the file.
- Back up all wanted files to your PC.

**CAUTION:**

- Do not remove the recording medium or turn off the power while accessing files.
  - Use the provided AC adapter.
  - If the data on the recording medium becomes corrupted, reformat the medium again.
-