

FORMAT HDD

Deletes all files on the HDD.


Setting	Details
FILE	Deletes all files on the HDD.
FILE + MANAGEMENT NO	Deletes all files on the HDD and resets the folder and file numbers to "1".

CAUTION:

- All data on the HDD will be deleted when it is formatted. Copy all files on the HDD to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.

Displaying the Item

1 Touch **OK** to display the menu.

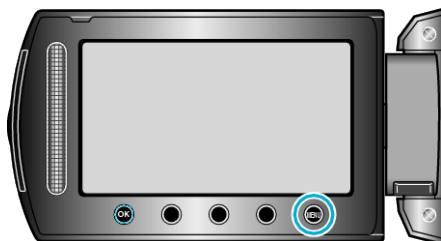


2 Select "MEDIA SETTINGS" and touch **OK**.



3 Select "FORMAT HDD" and touch **OK**.



4 Select the setting and touch **OK**.

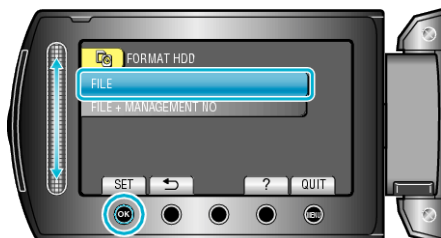

5 Select "YES" and touch **OK**.



- After formatting, touch **OK**.