


### Copying All Files

All files recorded on this unit will be copied. You can also select and copy only the files that have never been copied.

1 Select video or still image mode.

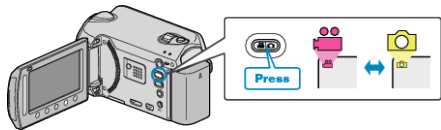

2 Select "CREATE FROM ALL"/"SAVE ALL" and touch **OK**.



3 Select the media for copying and touch **OK**.



4 Select the desired menu and touch **OK**.




Setting	Details
<ul style="list-style-type: none"> <li> "ALL SCENES"</li> <li> "ALL IMAGES"</li> </ul>	All files in the recording medium are copied.
<ul style="list-style-type: none"> <li> "UNSAVED SCENES"</li> <li> "UNSAVED IMAGES"</li> </ul>	Files that have never been copied are automatically selected and copied.

5 Select "EXECUTE" and touch **OK**.



• The number of discs required to copy the files is displayed. Prepare the discs accordingly.

6 Select "YES" or "NO" and touch **OK**. (👤 mode only)

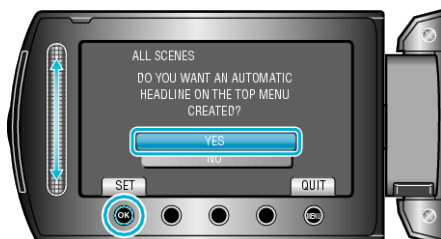

- When "YES" is selected, videos with similar recording dates are displayed in groups.
  - When "NO" is selected, videos are displayed according to recording dates.
- 7 Select "EXECUTE" and touch **OK**.



- When "INSERT NEXT DISC" appears, change the disc.
- After copying, touch **OK**.

8 Close the LCD monitor, then disconnect the USB cable.

#### CAUTION:

- Do not turn off the power or remove the USB cable until copying is complete.
- Files that are not on the index screen during playback cannot be copied.