

**RECORDING FAILURE**

Remove and re-insert the microSD card.  
Remove any dirt from the microSD card terminals.  
Insert the microSD card before turning on the power.  
Do not subject this unit to strong impact/vibrations.