 


### Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.

 
1 Touch **MENU** to display the menu.

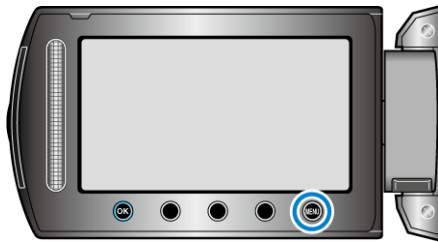

2 Select "MANUAL SETTING" and touch **OK**.



 


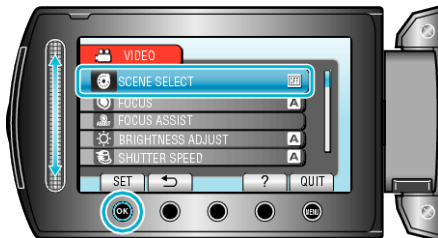





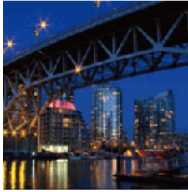 


3 Select "SCENE SELECT" and touch **OK**.



4 Select the scene and touch **OK**.

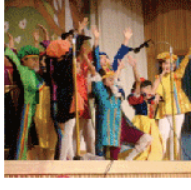

Setting	Effect
<b>NIGHT EYE</b> (GZ-HD620)	Increases gain and brightens the scene automatically when the surrounding is dark. To prevent camera shake, use a tripod. <b>OFF</b>  <b>ON</b> 
<b>NIGHT</b> (GZ-HD620)	Captures night scenes naturally. <b>OFF</b>  <b>ON</b> 
<b>PORTRAIT</b> (GZ-HD620)	Blurs the background to bring out the people in the picture. <b>OFF</b>  <b>ON</b> 
<b>SPORTS</b> (GZ-HD620)	Captures fast-moving subjects clearly in every single frame. <b>OFF</b>  <b>ON</b> 
<b>SNOW</b> (GZ-HD620)	Prevents the subject from appearing too dark when recording snow scenes on a sunny day. <b>OFF</b>  <b>ON</b> 
<b>SPOT-LIGHT</b>	Prevents the human subject from appearing too bright under light. <b>OFF</b>  <b>ON</b> 

\*The image is only an impression.