


Recording/snapshot cannot be performed.

Check the START/STOP switch.

Set to the recording mode with the  button.

Check the /  mode.