 



Deleting Playlists

Delete the playlists that you have created.

1 Select the playback mode.

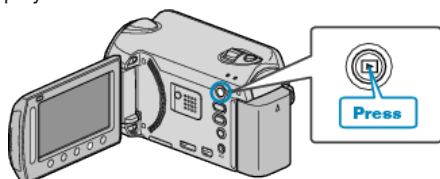

 2 Select video mode.

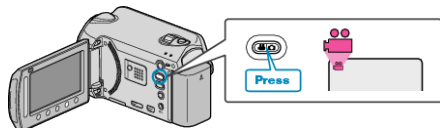

3 Touch MENU to display the menu.



 
4 Select "EDIT PLAYLIST" and touch OK .



5 Select "DELETE" and touch OK .




6 Select the playlist you want to delete and touch OK .

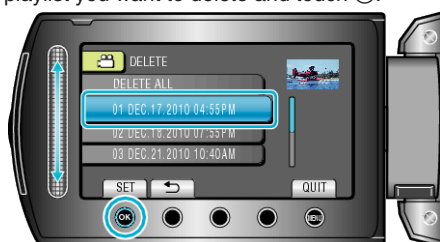

• All created playlists will be deleted when "DELETE ALL" is selected.

 7 Select "YES" and touch OK .

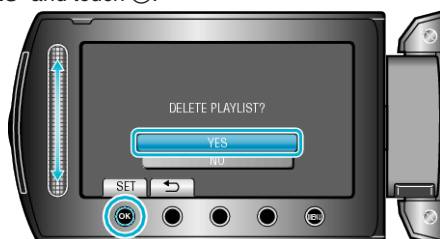

• After deleting, touch OK .

• To exit the screen, touch MENU .