

---

**POWER IS OFF, OR USB DEVICE IS UNSUPPORTED**

Turn on the power of the connected USB device.  
Connect the AC adapter to the BD/DVD writer.