

---

**The focus is not adjusted automatically.**

If you are recording in a dark place or a subject that has no contrast between dark and light, adjust the focus manually.

Wipe the lens with a lens cleaning cloth.

Cancel manual focus on the manual recording menu.

Use the Focus Assist function to adjust focus more precisely.