Backing Up Files

 ${\it 1}$ Select video or still image mode.



2 Select "BACK UP" and touch @.



 ${\it 3}$ Select the media to back up and touch ${\it ©}$.



4 Select the desired menu and touch .



Setting	Details	
"ALL SCENES" "ALL IMAGES"	All files in the recording medium are copied.	
## "UNSAVED SCENES" □ "UNSAVED IMAGES"	Files that have never been copied are automatically selected and copied.	

5 Select "OK" and touch .



- After copying, touch ®.
- To cancel copying, select "STOP".