 


Manual Recording

You can adjust settings, such as brightness and shutter speed, by using the manual mode.

 
Manual recording can be set for both video and still image modes.

1 Select video or still image mode.

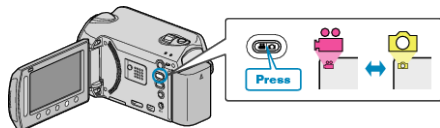


- The video or still image mode icon appears.

2 Select the Manual recording mode.

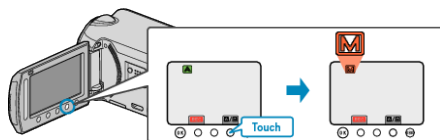

- The mode changes between Auto and Manual with every touch.

 3 Start recording.

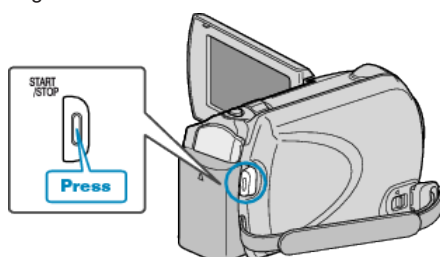

- Press again to stop.

NOTE:

- The manual settings are displayed only in the manual mode.

Manual Recording Menu

The following items can be set.

Name	Description
SCENE SELECT	<ul style="list-style-type: none"> Recordings that suit the shooting conditions can be performed easily.
FOCUS	<ul style="list-style-type: none"> Use manual focus if the subject is not focused automatically.
ASSIST FOCUS ASSIST	<ul style="list-style-type: none"> Use this for adjusting the focus more precisely.
BRIGHTNESS ADJUST	<ul style="list-style-type: none"> Overall brightness on the screen can be adjusted. Use this when recording in a dark or bright location.
SHUTTER SPEED (GZ-HD620)	<ul style="list-style-type: none"> Shutter speed can be adjusted. Use this when shooting a fast-moving subject or to emphasize the subject's movement.
WB WHITE BALANCE	<ul style="list-style-type: none"> Overall color on the screen can be adjusted. Use this when the color on the screen appears differently from the actual color.
BACKLIGHT COMP.	<ul style="list-style-type: none"> Corrects the image when the subject appears dark due to backlight. Use this when shooting against the light.
METERING AREA/TYPE	<ul style="list-style-type: none"> Brightness of a specified area can be set as the standard.
EFFECT	<ul style="list-style-type: none"> Images that look like old photographs or black-and-white movies can be taken.
TELE MACRO	<ul style="list-style-type: none"> Use this to take close-up (macro) shots of the subject.