 
 


Backing Up Files

1 Select video or still image mode.

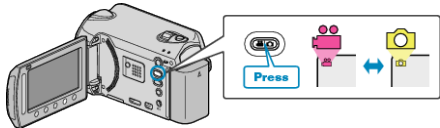


2 Select “BACK UP” and touch .

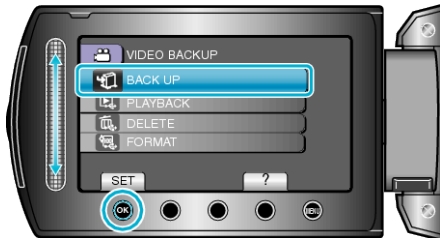

3 Select the media to back up and touch .



4 Select the desired menu and touch .

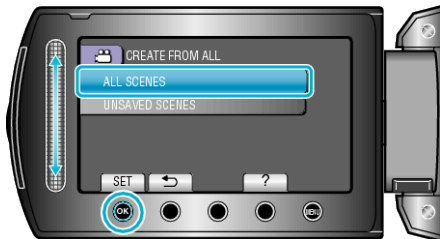

Setting	Details
 “ALL SCENES”  “ALL IMAGES”	All files in the recording medium are copied.
 “UNSAVED SCENES”  “UNSAVED IMAGES”	Files that have never been copied are automatically selected and copied.

5 Select “OK” and touch .



- After copying, touch .
- To cancel copying, select “STOP”.