



## Deleting Folders in the USB External Hard Disk Drive

1 Select video or still image mode.

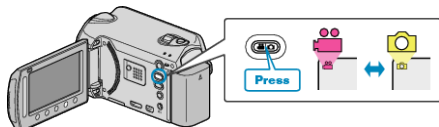

2 Select "DELETE" and touch .



3 Select the desired folder and touch .



4 Select "DELETE" and touch .



• After deleting, touch .