 


DATE DISPLAY STYLE

Sets the order of year, month, day and the time display format (24H/12H).

 
1 Touch **Ⓞ** to display the menu.

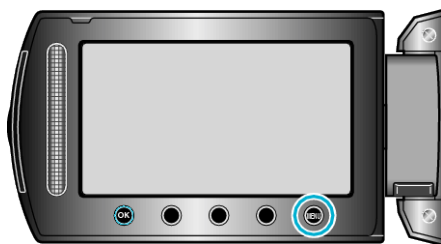

2 Select "DISPLAY SETTINGS" and touch **Ⓞ**.



3 Select "DATE DISPLAY STYLE" and touch **Ⓞ**.

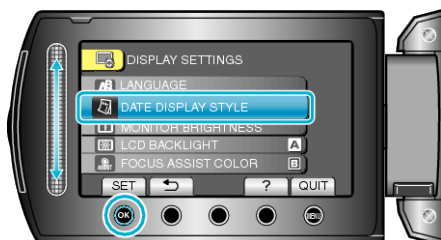




4 Set the style of date and time display.



- For date display, set to any format from "month.day.year", "year.month.day", and "day.month.year".
- For time display, set to any format from "12h" and "24h".
- Touch the operation buttons "←" / "→" to move the cursor.
- After setting, touch **Ⓞ**.

Clock Set Style

   The clock set style of this unit varies with the models.

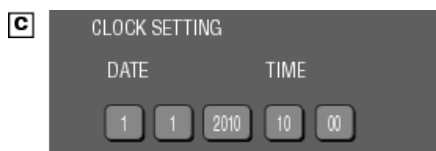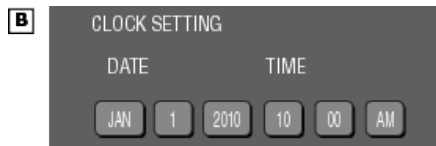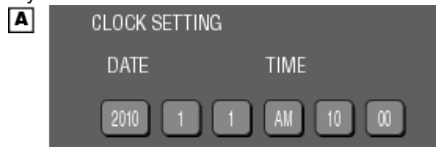

- The order of "Year, Month, Day, Time" changes according to the date display style.