 



Deleting Playlists

Delete the playlists that you have created.


- 1 Select the playback mode.

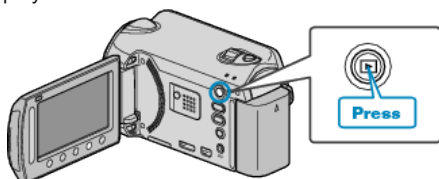

 
- 2 Select video mode.

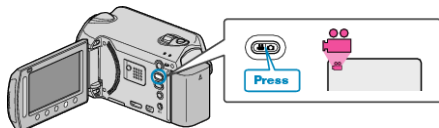

- 3 Touch to display the menu.

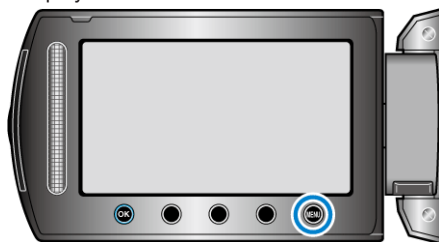 

- 4 Select "EDIT PLAYLIST" and touch .

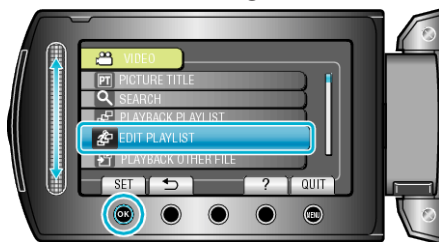 

- 5 Select "DELETE" and touch .



- 6 Select the playlist you want to delete and touch .



- All created playlists will be deleted when "DELETE ALL" is selected.

- 7 Select "YES" and touch .



- After deleting, touch .
- To exit the screen, touch .