


## Copying All Files

All files recorded on this unit will be copied.  
You can also select and copy only the files that have never been copied.

1 Select video or still image mode.

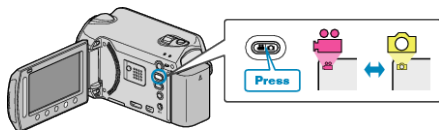

2 Select "CREATE FROM ALL"/"SAVE ALL" and touch **OK**.



3 Select the media for copying and touch **OK**.



4 Select the desired menu and touch **OK**.




Setting	Details
"ALL SCENES" "ALL IMAGES"	All files in the recording medium are copied.
"UNSAVED SCENES" "UNSAVED IMAGES"	Files that have never been copied are automatically selected and copied.

5 Select "EXECUTE" and touch **OK**.



- The number of discs required to copy the files is displayed.  
Prepare the discs accordingly.

6 Select "YES" or "NO" and touch **OK**. (Still image mode only)

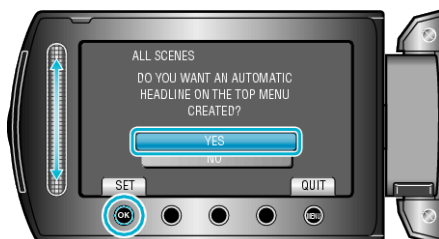

- When "YES" is selected, videos with similar recording dates are displayed in groups.
- When "NO" is selected, videos are displayed according to recording dates.

7 Select "EXECUTE" and touch **OK**.



- When "INSERT NEXT DISC" appears, change the disc.
- After copying, touch **OK**.

8 Close the LCD monitor, then disconnect the USB cable.

### CAUTION:

- Do not turn off the power or remove the USB cable until copying is complete.
- Files that are not on the index screen during playback cannot be copied.