

FORMAT SD CARD

Deletes all files on the microSD card.


Setting	Details
FILE	Deletes all files on the microSD card.
FILE + MANAGE- MENT NO	Deletes all files on the microSD card and resets the folder and file numbers to "1".

CAUTION:

- Not available for selection when no microSD card is inserted.
- All data on the card will be deleted when it is formatted.  
Copy all files on the card to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC  
adapter as the formatting process may take some time.
- Format a newly purchased microSD card with this unit before use.

Displaying the Item


1 Touch  to display the menu.

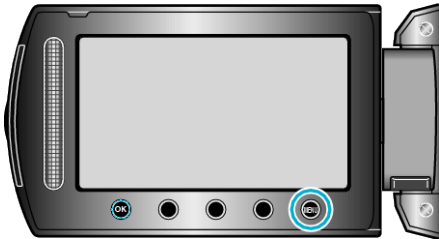


2 Select "MEDIA SETTINGS" and touch .




3 Select "FORMAT SD CARD" and touch .

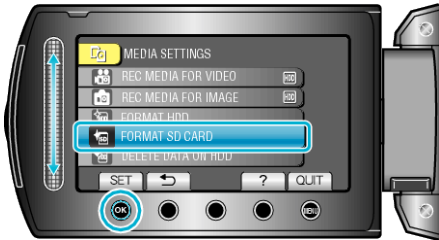

4 Select the setting and touch .

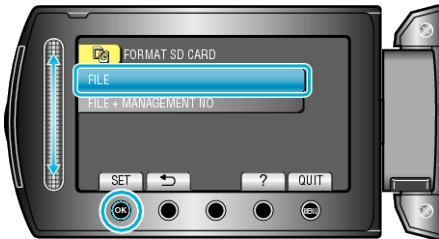

5 Select "YES" and touch .



- After formatting, touch .