Playing Back Files in the USB External Hard Disk Drive

 ${\it 1}$ Select video or still image mode.



2 Select "PLAYBACK" and touch \odot .



 $\it 3$ Select the desired folder and touch \odot .



4 Select the desired file and touch 68.



Touch ■ to stop playback.