


## Copying Selected Files

Select and copy the desired files.

1 Select video or still image mode.

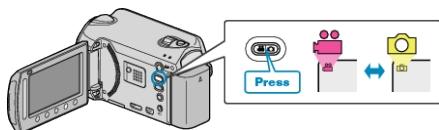

2 Select "SELECT AND CREATE"/"SELECT AND SAVE" and touch **OK**.



3 Select the media for copying and touch **OK**.



4 Select "SELECT FROM SCENES"/"SELECT FROM IMAGES" and touch **OK**.



5 Select the desired files and touch **OK**.



- A check mark appears on the selected file.  
To remove the check mark, touch **OK**.
- Touch "CHECK" to check the video.

6 After selecting, touch "SAVE".




7 Select "EXECUTE" and touch **OK**.



- The number of discs required to copy the files is displayed.  
Prepare the discs accordingly.

8 Select "YES" or "NO" and touch **OK**. (M mode only)

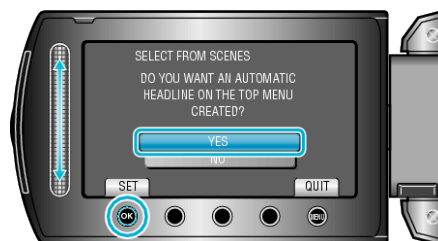

- When "YES" is selected, videos with similar recording dates are displayed in groups.
- When "NO" is selected, videos are displayed according to recording dates.

9 Select "EXECUTE" and touch **OK**.



- When "INSERT NEXT DISC" appears, change the disc.
- After copying, touch **OK**.

10 Close the LCD monitor, then disconnect the USB cable.

### CAUTION:

- Do not turn off the power or remove the USB cable until copying is complete.
- Files that are not on the index screen during playback cannot be copied.