

Preparing a BD Writer

NOTE:


When connecting to the external Blu-ray drive, use a USB cable with Mini-A (Male) – B (Male) connectors.

The USB cable bundled with this camera cannot be used.

To use the USB cable provided with the external Blu-ray drive, purchase the USB extension cable.

- Mini-A (Male) – A (Female)
(Part number: QAM0852-001)

1 Connect the USB cable and AC adapter.

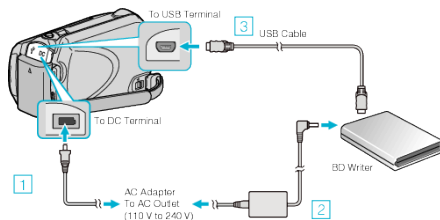

- ① Connect the AC adapter to this unit.
 - ② Connect the AC adapter of the BD writer.
 - ③ Connect the USB cable of the BD writer to this unit.
- Refer also to the instruction manual of the BD writer.


2 Insert a new disc.

- Press the power button on the BD writer to turn on the power.



- ① Press the eject button to open the disc tray.
- ② Pull out the tray completely and load a new disc properly.
- ③ Push the disc tray in until it clicks into place.

3 Open the LCD monitor.

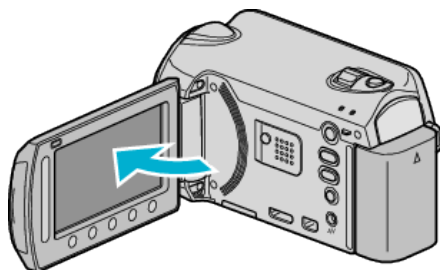

- The backup menu appears.
- While the USB cable is connected, the backup menu is displayed.

CAUTION:

- Be sure to turn off the power when connecting the devices.
Otherwise, electric shocks or malfunctions may occur.