

DIS

Camera shake during recording can be effectively reduced.


Setting	Details
OFF	Deactivates image stabilizer.
ON	Activates image stabilizer.
ON(A.I.S.)	Reduces camera shake more effectively when shooting bright scenes on the wide angle end. *Only on the wide angle end (approx. 5x)

Memo:

- It is recommended to set this mode to “OFF” when using a tripod and recording a subject with little movement.
- Complete stabilization may not be possible if camera shake is excessive.

Displaying the Item

1 Press MENU to display the menu.

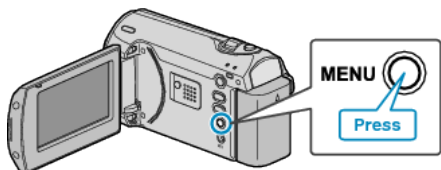

2 Select “DIS” with the ZOOM/SELECT lever and press OK.

