 



Protecting Selected Files

Protects or releases protection of the selected files.


1 Select the playback mode.

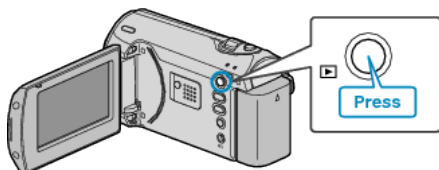

 
2 Press MENU to display the menu.

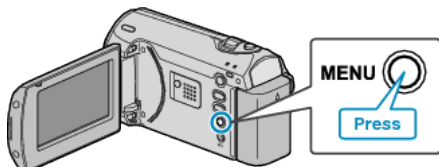

 3 Select "PROTECT/CANCEL" with the ZOOM/SELECT lever and press OK.

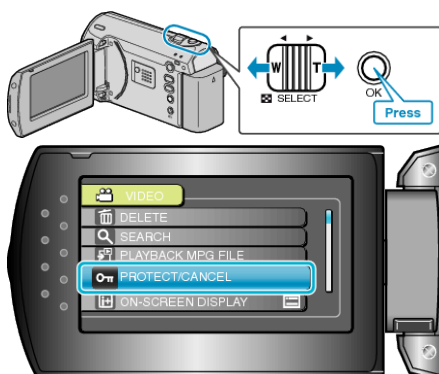

4 Select "FILE SELECT" and press OK.

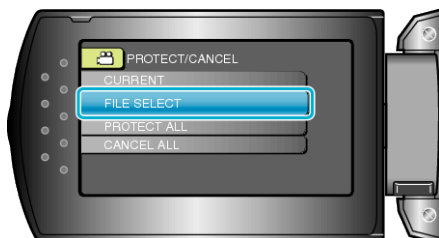 

5 Select the desired file and press OK.



- A protect mark appears on the selected file.
To remove the protect mark, press OK again.
- After selecting all the files to protect or release protection of, press MENU.

6 Select "YES" and press OK.

