


### ON-SCREEN DISPLAY

Sets whether to show on-screen displays such as icons during playback.


Setting	Details
OFF	No display at all.
DISPLAY ALL	Displays everything.
DISPLAY DATE ONLY	Displays the date only.

### Displaying the Item

1 Select the playback mode.

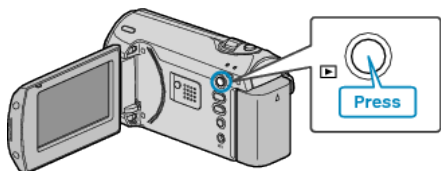

2 Press MENU to display the menu.

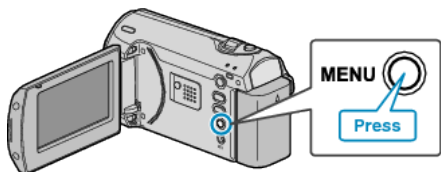

3 Select "ON-SCREEN DISPLAY" with the ZOOM/SELECT lever and press OK.

