


DISPLAY ON TV

Displays icons and date/time on a TV screen.


Setting	Details
OFF	Does not display icons and date/time on TV.
ON	Displays icons and date/time on TV.

Displaying the Item

1 Press MENU to display the menu.

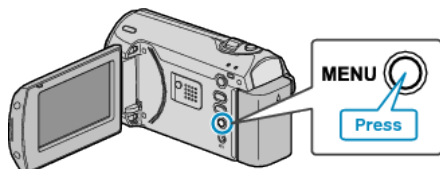

2 Select "CONNECTION SETTINGS" with the ZOOM/SELECT lever and press OK.

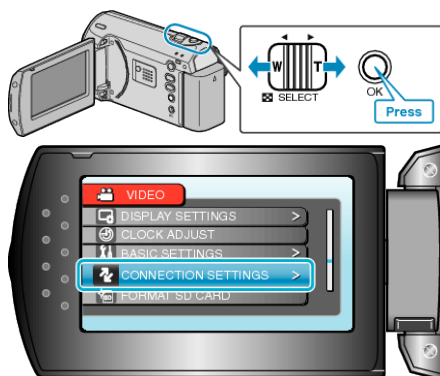

3 Select "DISPLAY ON TV" and press OK.

