


## Rear

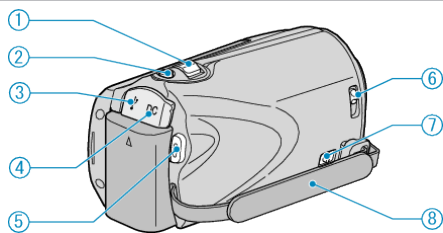

### 1 ZOOM/SELECT Lever

- During shooting: Adjusts the shooting range.
- During playback: Performs forward search/reverse search.
- Selects item or file from the menu or index screen.

### 2 OK Button

- During playback: Starts/pauses the playback of videos.
- Confirms the selected item or file from the menu or index screen.

### 3 USB Terminal

- Connects to PC using a USB cable.

### 4 DC Terminal

- Connects to an AC adapter to charge the battery.

### 5 START/STOP (Video recording) Button

- During recording: Starts/stops video recording.
- During playback: Starts/pauses the playback of videos.

### 6 Lens Cover Switch

- Opens and closes the lens cover.

### 7 Grip Belt Release Lever

- Allows the grip belt to be removed and used as a hand strap.

### 8 Grip Belt

- Pass your hand through the grip belt to hold this unit firmly.