
Unable to copy to SD card.

To use cards that have been used on other devices, it is necessary to format (initialize) the card using "FORMAT SD CARD".