


Rear

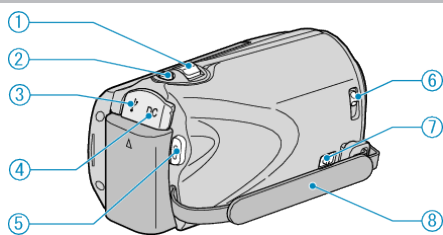

1 ZOOM/SELECT Lever

- During shooting: Adjusts the shooting range.
- During playback: Performs forward search/reverse search.
- Selects item or file from the menu or index screen.

2 OK Button

- During playback: Starts/pauses the playback of videos.
- Confirms the selected item or file from the menu or index screen.

3 USB Terminal

- Connects to PC using a USB cable.

4 DC Terminal

- Connects to an AC adapter to charge the battery.

5 START/STOP (Video recording) Button

- During recording: Starts/stops video recording.
- During playback: Starts/pauses the playback of videos.

6 Lens Cover Switch

- Opens and closes the lens cover.

7 Grip Belt Release Lever

- Allows the grip belt to be removed and used as a hand strap.

8 Grip Belt

- Pass your hand through the grip belt to hold this unit firmly.