 



## Inserting an SD Card

Insert a commercially available SD card before recording.


- 1 Close the LCD monitor.

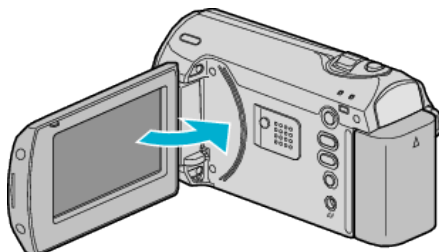

 - 2 Open the slot cover.

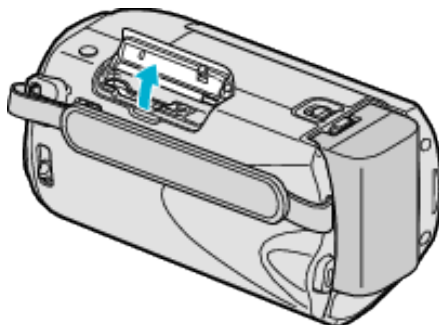

- 3 Insert an SD card.

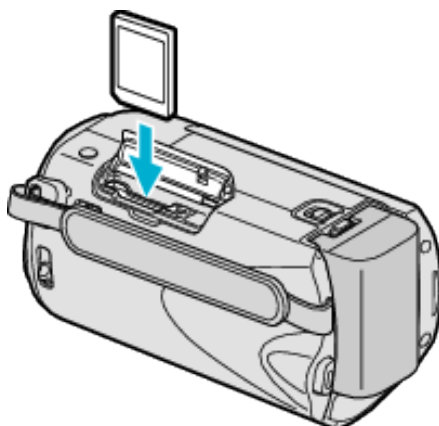 

- Insert with the label facing outward.

### Warning

- Make sure not to insert the card in the wrong direction. It may cause damage to the unit and card.
- Turn off the power of this unit before inserting or removing a card.
- Make sure that an SD card is inserted. Recordings cannot be performed without any SD card inserted.
- Do not touch the metal contact area when inserting the SD card.

### Memo:

- To use cards that have been used on other devices, it is necessary to format (initialize) the card using "FORMAT SD CARD".

## Removing the Card

Push the SD card inward once, then pull it out straight.

