

FORMAT SD CARD

Deletes all files on the SD card.


Setting	Details
FILE	Deletes all files on the SD card.
FILE + MANAGE- MENT NO	Deletes all files on the SD card and resets the folder and file numbers to "1".

CAUTION:

- Not available for selection when no SD card is inserted.
- All data on the card will be deleted when it is formatted.
Copy all files on the card to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC
adapter as the formatting process may take some time.

Displaying the Item

- 1 Press MENU to display the menu.

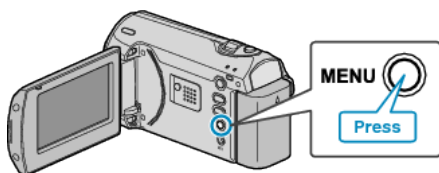

- 2 Select "FORMAT SD CARD" with the ZOOM/SELECT lever and press OK.

